



Cartridge swap step:

1. Unload the filament
2. Cool down the hotend to 50 °C deg
3. Shut down the printer

After these 3 steps you can remove the cartridge safely.